



RETROFIT FARMHOUSE SINK INSTALLATION GUIDE

AVAILABLE EXCLUSIVELY AT RACHIELE, THIS PATENTED DESIGN ALLOWS FOR AN APRON FRONT SINK TO BE INSTALLED WITHOUT CUTTING YOUR SINK BASE CABINET. SIMPLY REMOVE FALSE DRAWER HEAD(S) AND DROP IN PLACE.

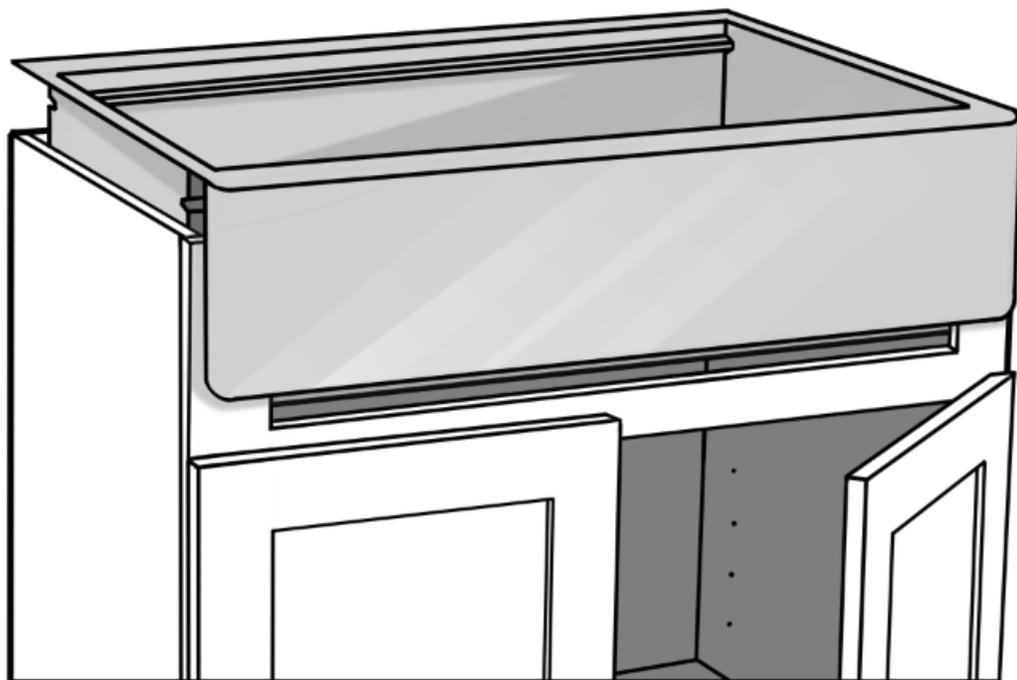

RETROFIT INSTALLATION IS SIMPLE WHEN YOU ARE REPLACING A COUNTER TOP AND WHILE KEEPING YOUR EXISTING CABINETRY. THE MEASUREMENTS NEEDED ARE:

- ① LENGTH OF FALSE DRAWER HEAD - OR LENGTH OF BOTH DOORS BELOW. WE WANT TO LINE THE APRON UP WITH THE DOORS BELOW.
- ② HEIGHT FROM TOP OF CABINET BOX TO BOTTOM OF FALSE DRAWER HEAD. THIS WILL BE THE HEIGHT OF THE APRON ON THE SINK.

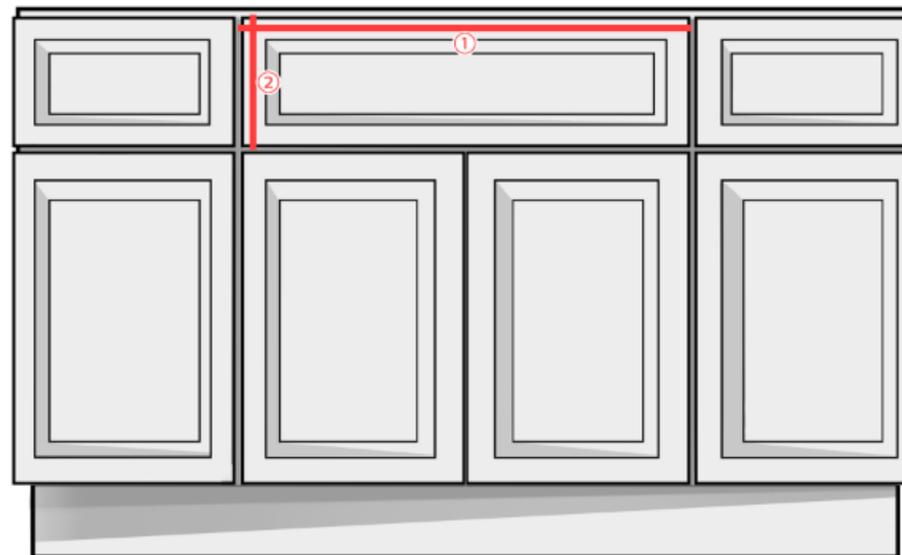

INSTALLATION NOTE: THE APRON LINES UP WITH THE DOORS BELOW AND WITH THE ADJACENT DRAWERS. THERE IS A 1 INCH CHANNEL BEHIND THE APRON THAT SIMPLY SLIPS OVER THE FACE FRAME OF THE CABINET ONCE THE FALSE DRAWER HEAD OR HEADS ARE REMOVED.

FOR MORE INFO ON INSTALLATION, VISIT
RACHIELE.COM/INSTALLATION-AND-CARE