



FARMHOUSE SINK INSTALLATION GUIDE

EVERY RACHIELE SINK IS CUSTOM DESIGNED, THEREFORE THESE ARE GENERIC INSTRUCTIONS. FOR FULL OVERLAY CABINETS, WE GENERALLY MATCH THE OVERALL DIMENSION OF THE TWO DOORS BELOW THE APRON, WHICH IS TYPICALLY 1/4" SMALLER THAN THE OVERALL LENGTH. FOR INSET DOOR STYLES, WE GENERALLY DESIGN THE APRON TO THE EXACT OVERALL DIMENSION OF THE CABINET, WHICH WILL REQUIRE SOME CUTTING OF THE VERTICAL STILES ON EACH SIDE OF THE SINK OPENING.

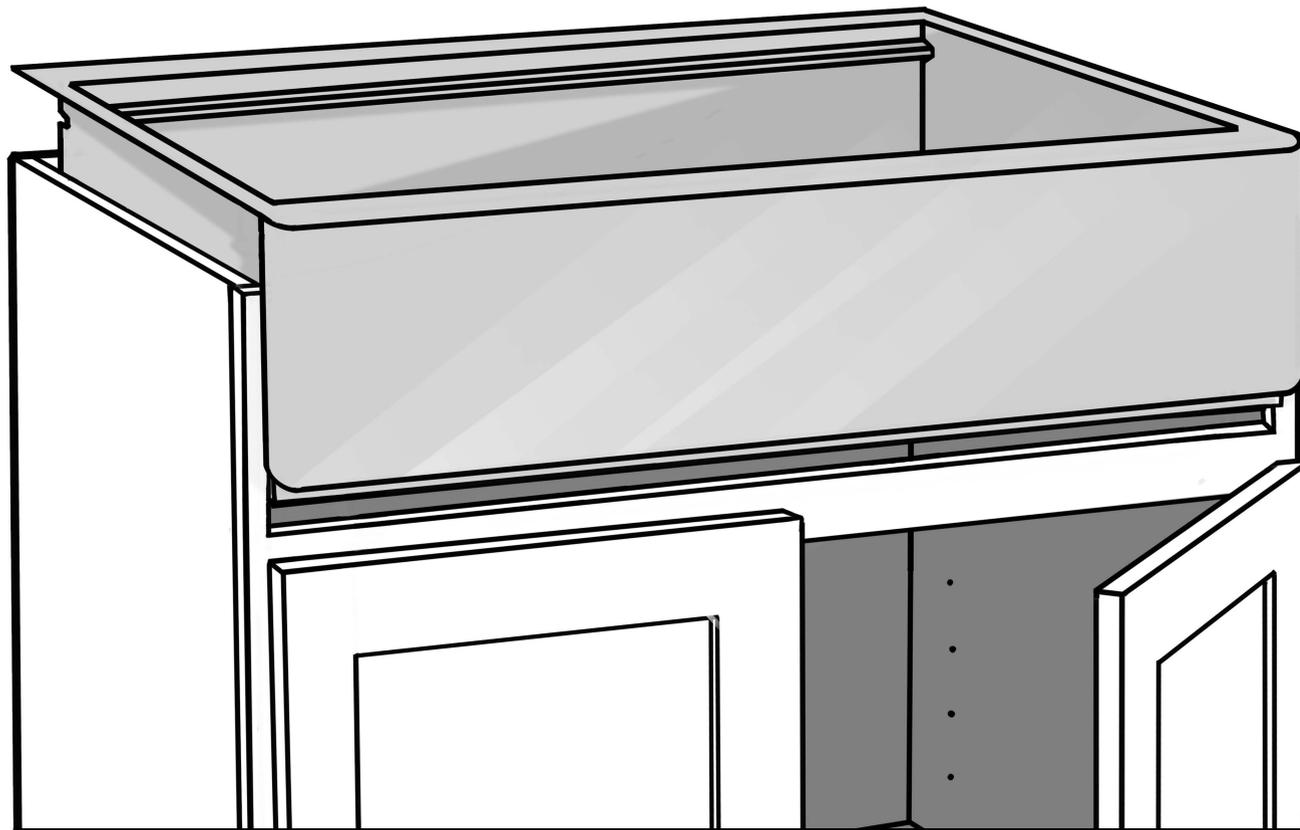

INSTALLATION NOTE: THE APRON LINES UP WITH THE DOORS BELOW AND WITH THE ADJACENT DRAWERS. FOR UNDER-MOUNT SINKS, THE COUNTER TOP SHOULD BE CUT TO SIZE WITH THE SINK INTERIOR, AND INSTALLED WITH NO OVERHANG, AND NO REVEAL.

FOR MORE INFO ON INSTALLATION, VISIT
RACHIELE.COM/INSTALLATION-AND-CARE

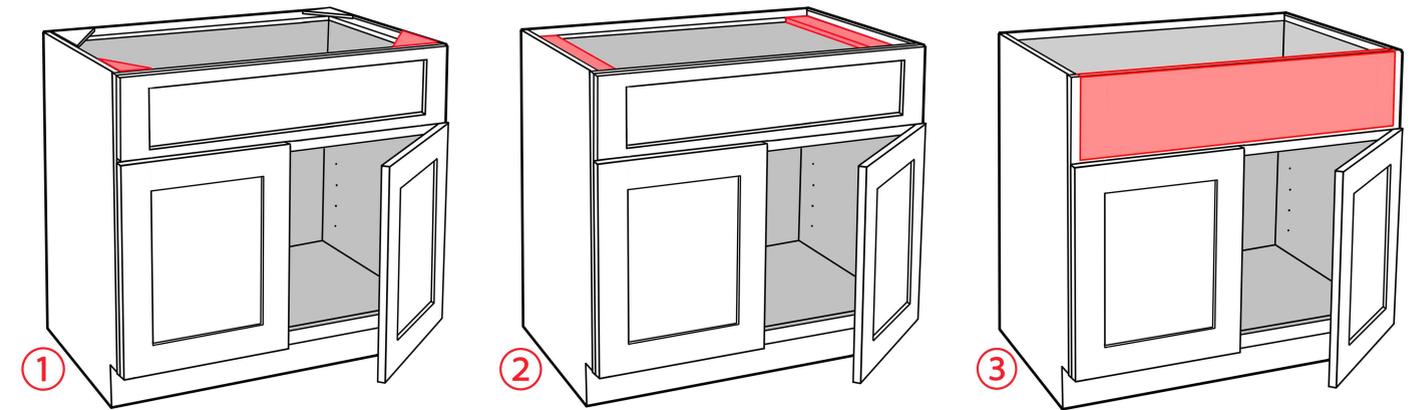

FIRST, DEPENDING ON YOUR CABINET DESIGN YOU'LL NEED TO REMOVE EITHER THE FOWARD **CORNER GUSSETS** ① OR LEFT AND RIGHT **SIDE SUPPORTS** ② FROM THE TOP OF YOUR CABINET OPENING. THIS WILL ALLOW THE SPACE NEEDED FOR YOUR SINK BOWL TO INSTALL SMOOTHLY AND WITHOUT OBSTRUCTION.

NEXT, AN OPENING WILL NEED TO BE CUT OUT OF THE **FRONT OF THE CABINET** ③ TO THE OUTSIDE DIMENTIONS OF YOUR SINK BOWL PLUS 1/16", TO ALLOW THE APRON TO OVERHANG THE CABINET STILES.

SINKS AND APRONS ARE GENERALLY 8 1/4" TALL, SO THE SINK OPENING IN THE FRONT OF YOU CABINET SHOULD BE CUT TO 8 1/16" TO ALLOW FULL APRON COVERAGE. THE APRON HAS A 1" RECESS ON THE RIGHT AND LEFT SIDES WICH WILL OVERLAY THE THE CABINET STILES.

IF YOU ARE ORDERING CABINETRY, YOU CAN ORDER A CABINET THE SAME WIDTH AS THE SINK. FOR EXAMPLE; IF YOU WOULD LIKE A 36" APRON FRONT SINK, YOU CAN ORDER A 36" WIDE CABINET.

LASTLY, TO SUPPORT TO REAR FLANGE OF YOUR SINK, ALL YOU WILL NEED IS A 1" X 4" WOOD STUD. ACROSS THE REAR OF THE CABINET, THIS IS EASILY ATTACHED BY SCREWING FROM THE OUTSIDE OF THE CABINET TO SECURE THE 1" X 4" FLUSH UNDER THE REAR FLANGE.