

How To Measure For A Retrofit Top Mount Farmhouse Sink

Relax! This retrofit process is straightforward. Hundreds have done it with ease, and we are here to guide you.

- **Measuring Tools required:** Carpenter square and measuring tape for precise measurements. If measuring isn't your forte, enlist a friend or call me for guidance.
- **Who you'll need:** A plumber and a handyman, tile setter, granite fabricator, or anyone skilled with using an angle grinder. The cutting of the countertop is not difficult at all. This should be a one-day project!

Steps:



- 1. Take Cabinet and Counter Dimensions:** Use the provided illustration to measure from A to G
- 2. Send Your Dimensions:** Email your measurements to Dino@Rachiele.com Include photos of your entire sink area, including any nearby windows. Please include written dimensions only, no photos of measuring tapes.
- 3. Schedule A Complementary Design Call:** Call us at 407-880-6903 or use this [link](#) to schedule time on our calendar. We will go over all options to make sure that you get the perfect sink for your needs.
- 4. Next Steps:** Once you place your order, we will provide a dimensional drawing for your review and approval before we begin production.



Before



After

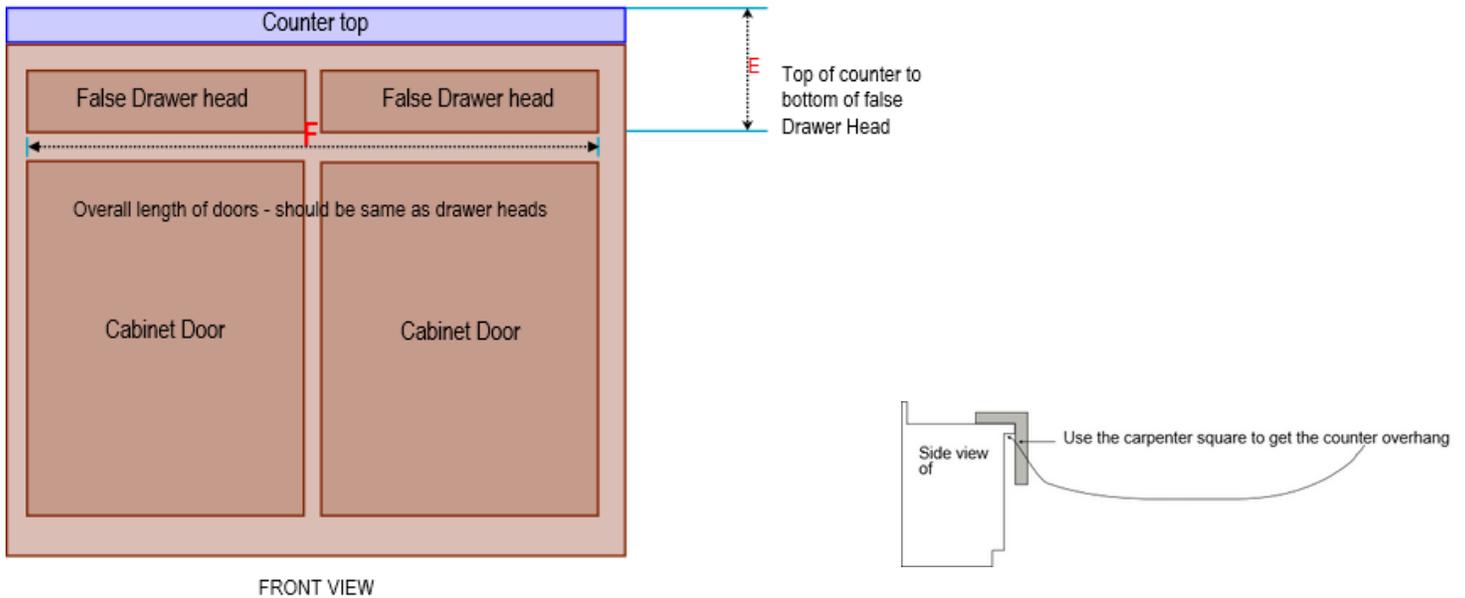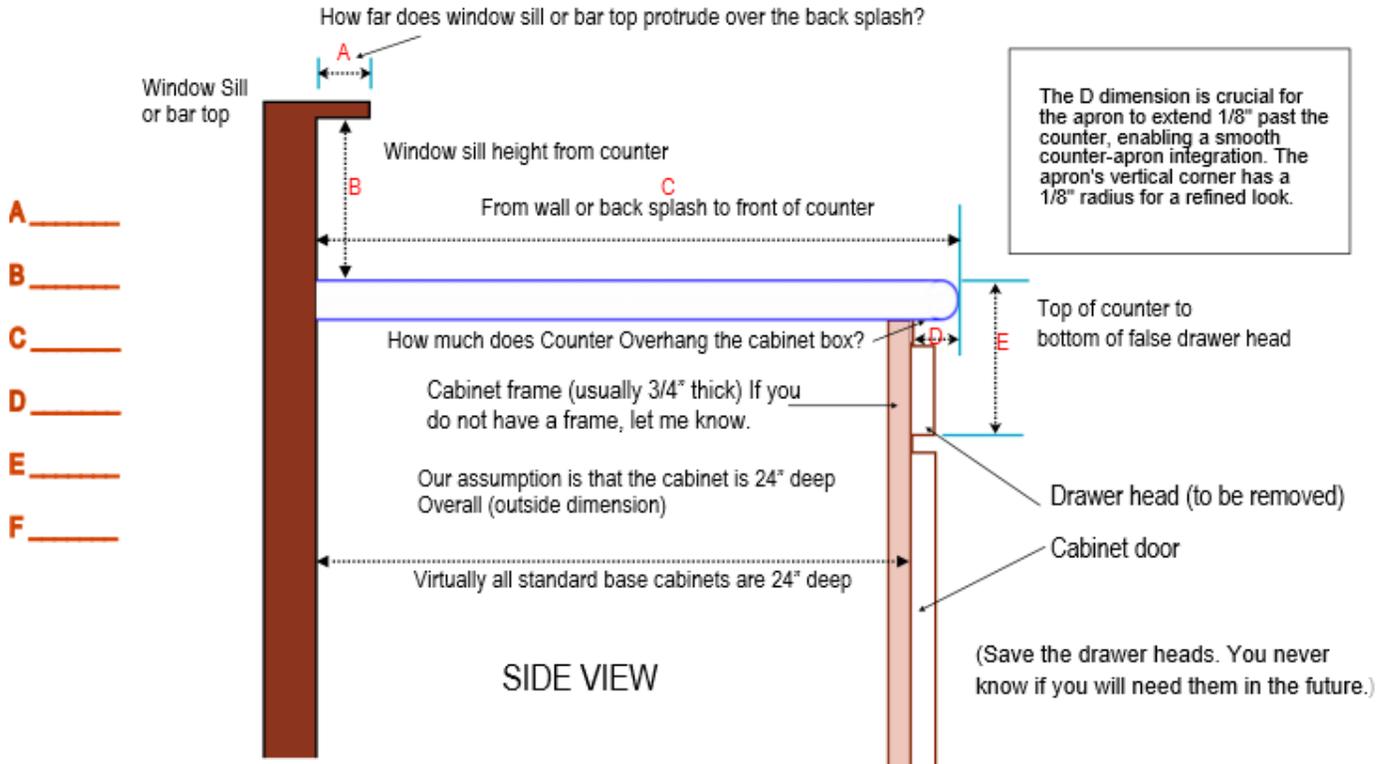

Tips to Ensure a Perfect Fit

If you want your sink to go all the way back to the wall or backsplash, make sure you take the "C" and "D" measurements in three locations - right side, left side and middle. There is often a variation in dimensions here.

We will need to know if you have a framed or frameless cabinet. Framed cabinets have rails and stiles forming a face frame, while frameless cabinets lack this frame, showing only the sides. Not sure? Send us a picture and we can help you determine.